

# INSTRUCTION MANUAL



**SupaBoy<sup>TM</sup> S**  
PORTABLE POCKET SNES CONSOLE

To view this manual in French, Spanish,  
or Japanese, please go to:  
[www.hyperkin.com/product-manuals](http://www.hyperkin.com/product-manuals)

You can also scan  
this QR code to  
view the manual:



**HYPERKIN<sup>®</sup>**  
PLAY WELL. LIVE WELL.

# TABLE OF CONTENTS

Table of Contents	..... 2
Package Contents	..... 3
SupaBoy S Layout	..... 4
Charging the Battery	..... 5
Volume, Headphones, & Brightness	..... 6
Playing Games / Reset a Game	..... 7
Using Controllers	..... 8
Outputting to TV	..... 9

## Important Health Warning About Playing Video Games


A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns that may appear in video games. Even people who have no history of seizures or epilepsy may have an undiagnosed condition that can cause these “photosensitive epileptic seizures” while watching video games.

These seizures may have a variety of symptoms, including lightheadedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, or momentary loss of awareness. Seizures may also cause loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects.

Immediately stop playing and consult a doctor if you experience any of these symptoms. Parents should watch for or ask their children about the above symptoms – children and teenagers are more likely than adults to experience these seizures. The risk of photosensitive epileptic seizures may be reduced by taking the following precautions: sit farther from the screen, use a smaller screen, play in a well-lit room, and do not play when you are drowsy or fatigued.

If you or any of your relatives have a history of seizures or epilepsy, consult a doctor before playing.


# PACKAGE CONTENTS

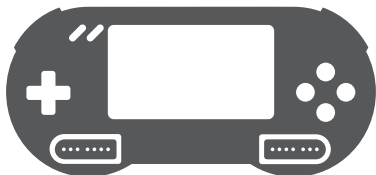

SupaBoy S System



Micro USB Charge Cable

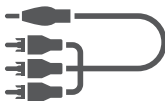

AV Cable




Pocket Pouch



Wrist Strap

# SUPABOY S LAYOUT

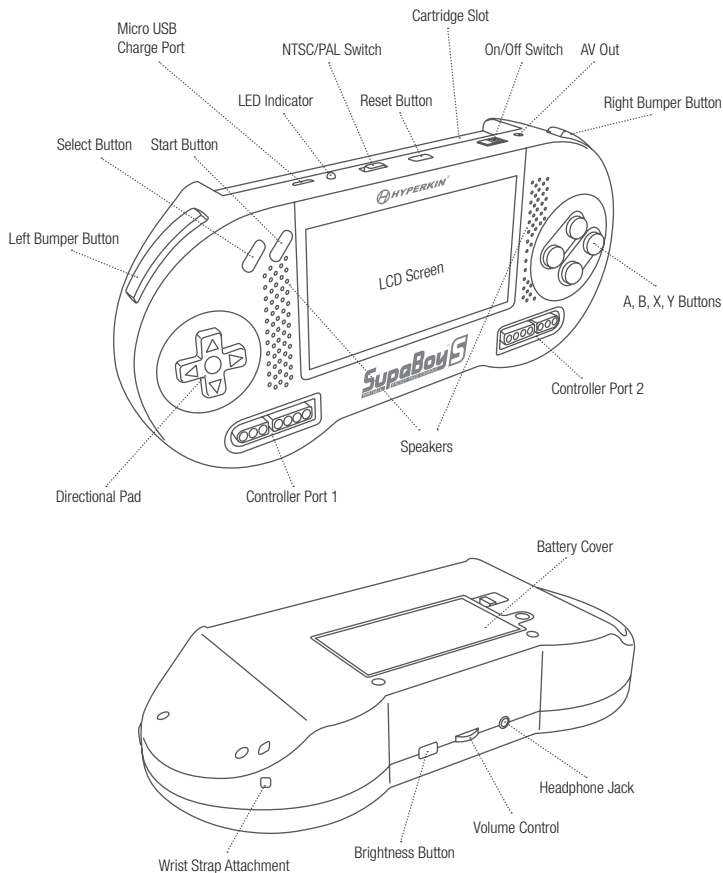


## USER SAFETY PRECAUTIONS

- Do not expose SupaBoy S to direct sunlight or extreme temperatures for extended periods of time.
- Please store SupaBoy S at room temperature, which is between 40°F and 80°F.
- When transporting or temporarily storing in a vehicle, temperature should not exceed 150° or fall below 20°F.
- Storing SupaBoy S at temperatures greater than 170° for extended periods of time may cause damage to the battery, overheat the device, or cause potential fire.

Observe signs of overheating from overcharging. Stop usage or charging if you detect swelling, smoke, or high temperatures and dispose of the battery pack safely and away from flammable materials.

## CHARGING THE BATTERY

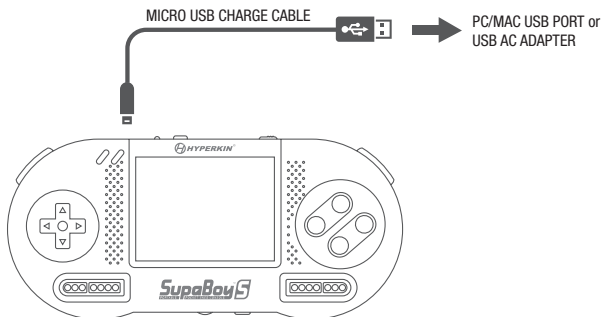

Attach the MICRO USB CHARGE CABLE to the SupaBoy S, located on the top of the SupaBoy S System. Make sure the other end of the cable is connected to a power source (PC/MAC USB port or USB AC adapter). The LED INDICATOR on the top of the SupaBoy S System will light up RED, indicating that the SupaBoy S is charging. LED INDICATOR will light up GREEN when the SupaBoy S is fully charged.


# HEADPHONES, VOLUME, & BRIGHTNESS

To use headphones with the SupaBoy S:

1. Insert headphones into the HEADPHONE JACK located on the bottom of the SupaBoy S system.
2. Use the VOLUME CONTROL on the bottom of the SupaBoy S system to adjust volume levels.

To adjust the volume of the SupaBoy S:

1. On the bottom of the SupaBoy S system, there is a scrolling VOLUME CONTROL dial. To raise the volume, scroll the VOLUME CONTROL to the right; to lower the volume, scroll the VOLUME CONTROL to the left.

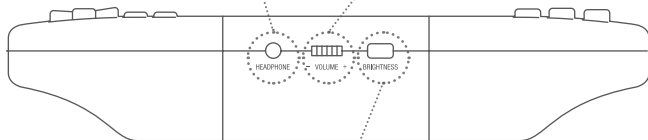


SUPABOY S BOTTOM

To adjust the screen brightness:

Located on the bottom of the SupaBoy S is a BRIGHTNESS BUTTON. Pushing it allows you to cycle through 5 different brightness settings, including turning the screen OFF (useful for conserving battery during AV OUT mode).

## PLAYING GAMES

The SupaBoy S is able to play NTSC SNES/Super Famicom and PAL SNES Cartridges.

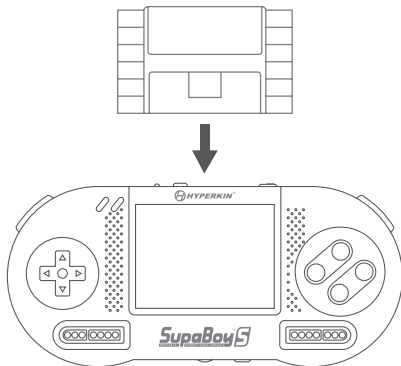


1. Insert the game cartridge (label side facing towards yourself) into the CARTRIDGE SLOT, found on the top of the SupaBoy S.
2. Turn the ON/OFF switch to the ON position.

*\* If the game cartridge is a PAL game, be sure to adjust the NTSC/PAL switch to PAL before turning the console ON.*

## RESET A GAME

To reset a game, press the RESET button located on the top of the SupaBoy S above the screen.

# USING CONTROLLERS

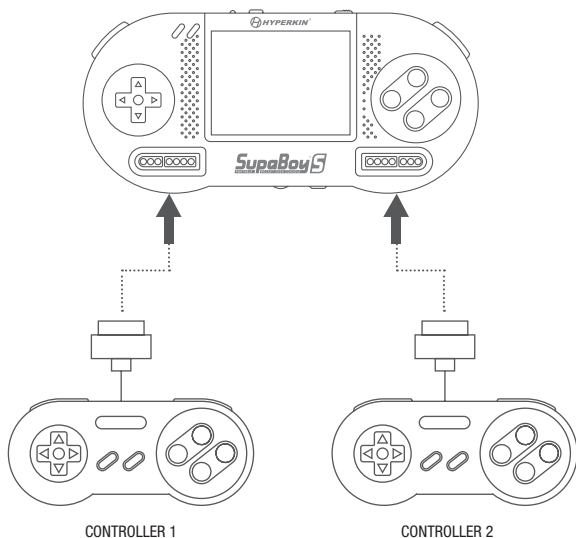


To play games using the controller ports of the SupaBoy S:

1. Insert a controller into CONTROLLER PORT 1.
2. To play with two controllers with the SupaBoy S, insert a controller into CONTROLLER PORT 1, then insert the other controller into CONTROLLER PORT 2.

**Note:** This can be done while the SupaBoy S is ON or OFF. Also, when the controller is plugged into Controller 1, the DIRECTIONAL PAD and the face buttons on the SupaBoy S system will be disabled until the controller is unplugged from CONTROLLER PORT 1.



## OUTPUTTING TO TV

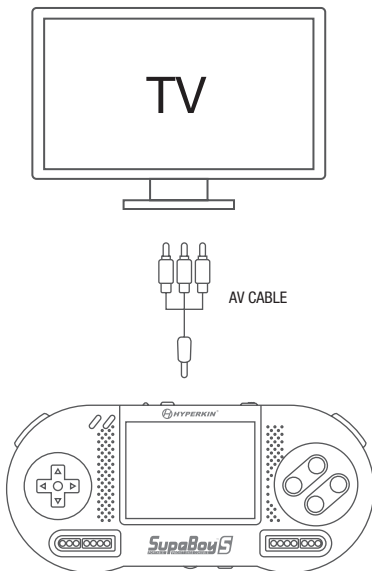


To connect the SupaBoy S system to the TV:

1. Insert the AV CABLE provided with the system into the AV OUT slot located on the top of the SupaBoy S system. This can be done while the SupaBoy S is ON.
2. Insert the AV CABLE into the composite input connector on the TV.

**Note:** This can be done while the SupaBoy S is ON or OFF. The original SNES/Super Famicom systems were designed to be played on a standard definition tube TV. When connecting the SupaBoy S system into an HDTV, some accessories may not be compatible.

# SupaBoy<sup>TM</sup>S

PORTABLE POCKET SNES CONSOLE

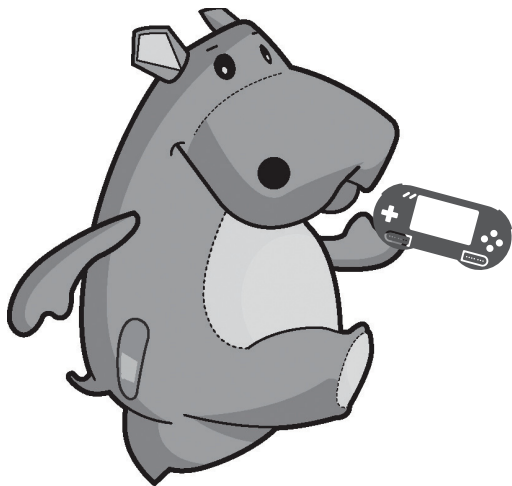

[www.hyperkin.com](http://www.hyperkin.com)



© 2016 Hyperkin Inc. Hyperkin® is a registered trademark of Hyperkin Inc. SNES and Super Famicom are trademarks of Nintendo® of America and Nintendo Co., Ltd. respectively. This product is not designed, manufactured, sponsored, endorsed, or licensed by Nintendo® of America Inc nor Nintendo Co., Ltd. All rights reserved.